

LOWER HOOD PANELS Peterbilt 388/389

INSTALLATION INSTRUCTIONS:

1. Identify the huck rivets that will need to be removed. Hold the part in position if necessary.
2. Remove the appropriate huck rivets. Cutting the huck rivets off from the backside is recommended.
3. Using a 5/16" drill bit, oversize the huck rivet holes.
4. Completely remove the mud flap and aluminum fender support.
5. It is recommended that masking tape be applied to the front fender and horizontally on the hood where the top edge of the Panelite Lower Hood Panel will reside to protect the paint.
6. Use the provided alcohol pads to clean the area on the hood for the double-sided tape.
7. Create a pull-tab on the double-sided tape by peeling and folding a portion of the tape's liner as shown in Figure 1.

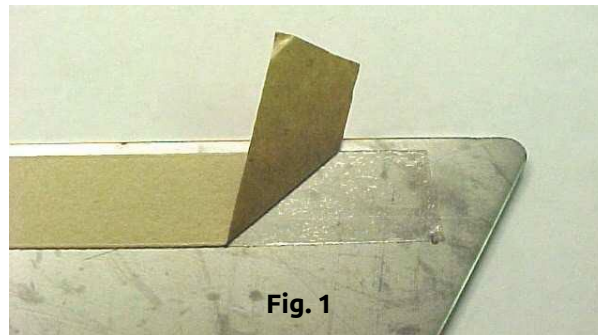


Fig. 1

8. Securely attach the part(s) with the provided hardware ***being careful not to over-tighten and dimple the panels.***
9. Install the aluminum fender support and mud flap.
10. Remove any masking tape.
11. Carefully lift the corner of the panel and remove the tape liner.
12. Firmly press the part into position to secure the tape.

PANNEAUX DE CAPOT INFÉRIEURS Peterbilt 388/389

INSTRUCTIONS D'INSTALLATION:

1. Identifiez les rivets huck qui devront être retirés. Tenez la pièce en position si nécessaire.
2. Retirez les rivets huck appropriés. Il est recommandé de couper les rivets huck à partir de l'arrière.
3. À l'aide d'une mèche de 5/16", élargissez les trous de rivet huck.
4. Retirez complètement le garde-boue et le support d'aile en aluminium.
5. Il est recommandé d'appliquer un ruban de masquer sur l'aile avant et à l'horizontale sur le capot là où la bordure supérieure du panneau de capot inférieur Panelite sera placée pour protéger la peinture.
6. Utilisez les tampons d'alcool fournis pour nettoyer la zone sur le capot pour l'adhésif double-face.
7. Créez un onglet sur le ruban double-face en pelant et pliant une partie du ruban tel qu'indiqué.

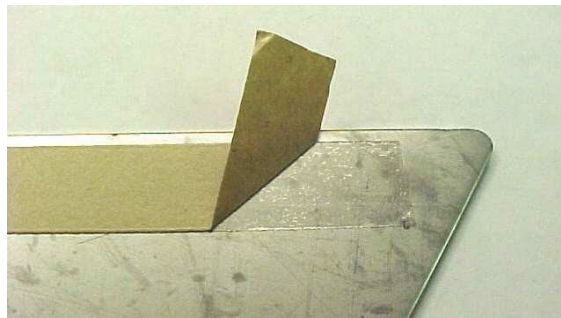


Image 1

8. Fixez fermement la (les) pièce(s) avec la quincaillerie fournie, **en faisant attention de ne pas trop serrer et déformer les panneaux.**
9. Installez le support d'aile en aluminium et le garde-boue.
10. Retirez tout le ruban adhésif.
11. Soulevez avec précaution le coin du panneau et retirez la pellicule protectrice du ruban adhésif.
12. Appuyez fermement sur la pièce en position pour assurer une bonne adhérence du ruban.