

## HEADLIGHT EYEBROW WS 5700

### INSTALLATION INSTRUCTIONS

1. Remove headlight and signal light assemblies.
  - a. Open hood
  - b. Remove fender splash guards by removing the (4) T30 fasteners (see FIGURE 1).

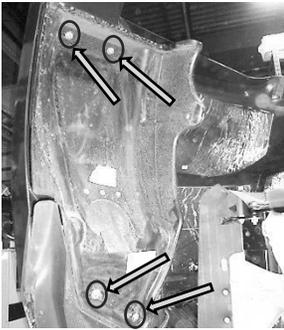


Figure 1 – Driver Side, open hood

- c. Unplug the headlight and signal light
  - i. Headlight: Press release tab inward and pull plug straight out (see FIGURE 2).

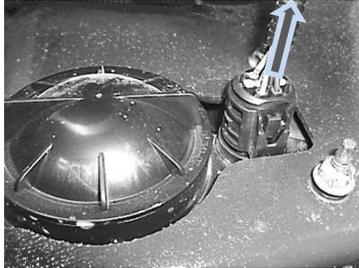


Figure 2 – Headlight wire

- ii. Signal Light: Pull white locking-clip up to unlock (see FIGURE 3), then press release tab inward and pull plug straight up.

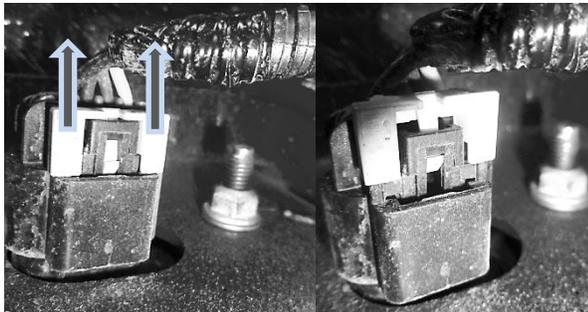


Figure 3 – Signal Wire

- d. Remove headlight/signal fasteners. (Support headlight/signal light when removing fasteners)
  - i. Remove (6) nuts from the back of headlight/signal with a 13mm socket (see FIGURE 4)



Figure 4 Headlight/Signal Nuts

- ii. Remove the (1) torx screw from the signal light with a T30 driver (see FIGURE 5).
  - iii. Remove the (3) torx screws from the headlight trim with a T25 driver (see FIGURE 5).
  - iv. Remove round compression clip from headlight bezel. Gently pry off with flat head screw driver. Or gently pull headlight bezel out of clip. Pay attention not to lose clip when it detaches (see FIGURE 5).

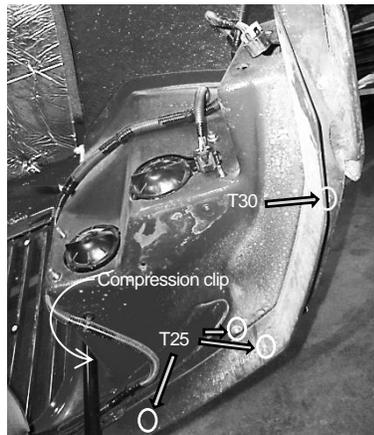


Figure 5 Headlight/Signal Torx fasteners & clip

- e. Remove signal light, then remove headlight.
  - f. Close hood.
2. Position Headlight Eyebrow on truck, ~ touching the grille, and mark the 3 screw holes to be drilled.
  3. Remove Headlight Eyebrow and drill holes at 7/32"
  4. Reposition Headlight Eyebrow and secure with fasteners. Use the supplied 10-32 bolts with flat washer & locknut for each mounting hole.
  5. Re-install headlight & signal in the reverse order of disassembly.
  6. Peel plastic and clean with glass cleaner as necessary.