

FENDER GUARD

FREIGHTLINER, CORONADO SET BACK AXLE

Panelite, Inc. · 275 Industrial Road · Cambridge, ON N3H 4R7 · Phone: 519-884-8555 · Toll Free: 1-877-884-8555 · FAX 519-884-8553 · website: www.panelite.com

Installation Procedure :

1. Remove plastic from area around holes.
2. Drill 9/32" holes as shown in figure A.
3. Install fender guards as shown in figure B.
4. Remove remainder of plastic from part.

Note: passenger side is shown, driver side is mirror image

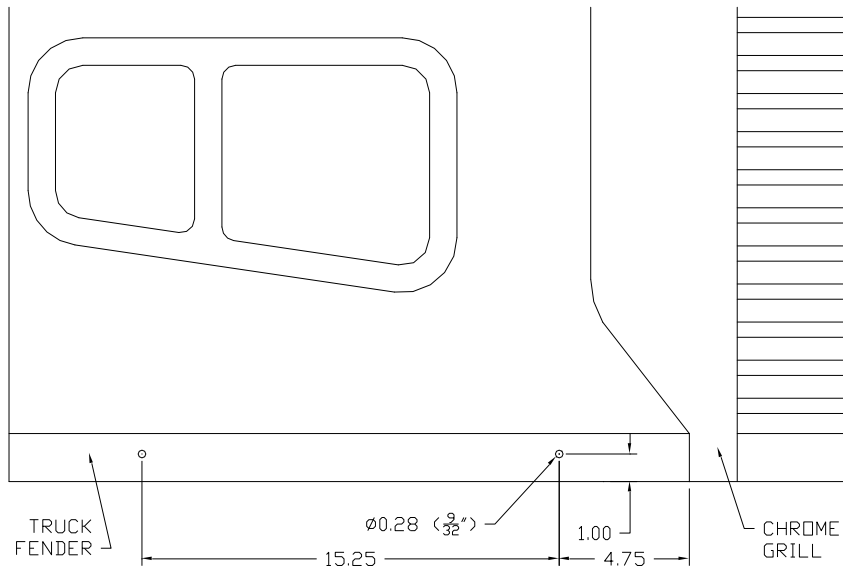


Figure A

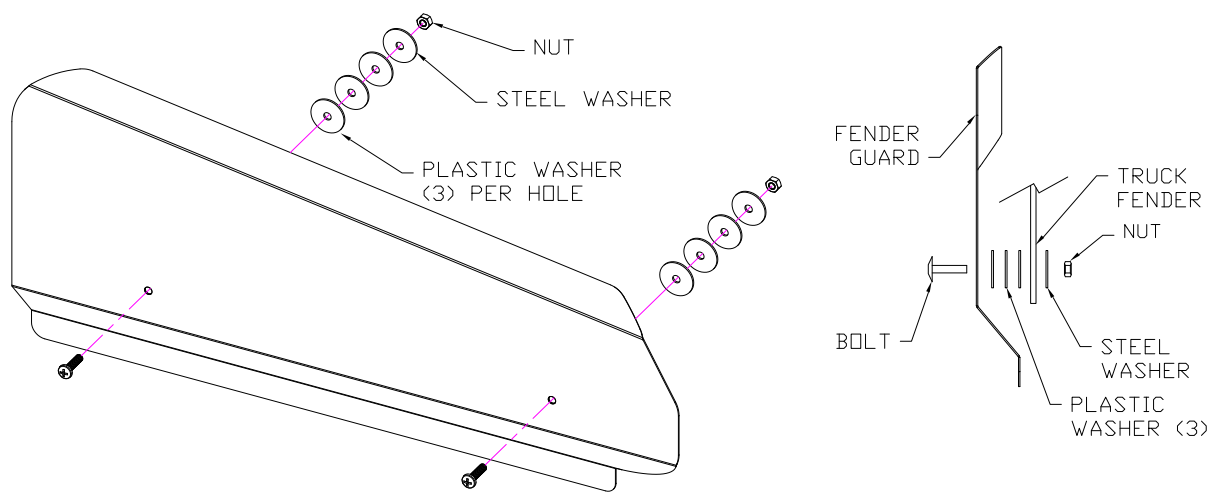


Figure B